
Installation Instructions

4telehook


Flat screen wall mount | fixed

Components Checklist

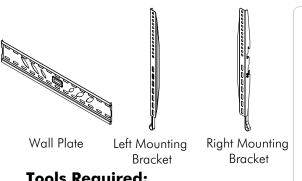

Tools Required:

- Power Dril
- 3mm (1/8") drill bit
- Phillips Head screwdriver
- 10mm (3/8") masonry drill bit 11mm (7/16") Socket Wrench or Shifter

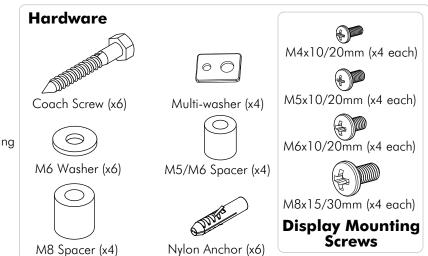


IMPORTANT INFORMATION

- IMPORTANT Install Telehook 3060 Wall Mount as per Installation Instructions.
- This product supports a maximum load of 50kg (110lbs).
- This product only supports displays with mounting hole configurations from 100mm wide x 100mm high up to 600mm wide x 400mm high.
- The manufacturer does not accept responsibility for incorrect installation.
- Before installing this Telehook product, please check the display ventilation requirements with your LED/LCD manufacturer.

Step 1. Check Components


Check you have received all parts against the Component Checklist and Hardware above.

Step 2. Mounting the Wall Plate

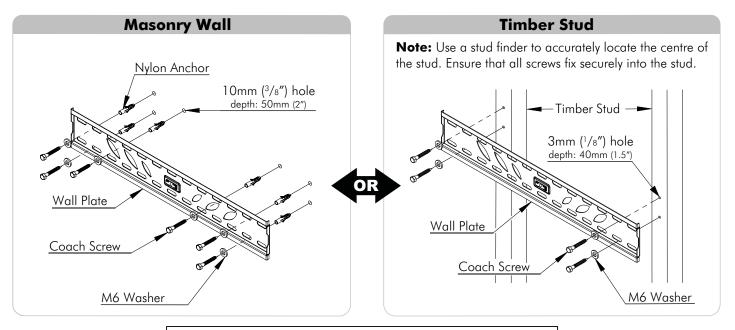

Tip: Use the built-in spirit level to ensure wall plate is horizontal

Step 3. Attaching Brackets to Display

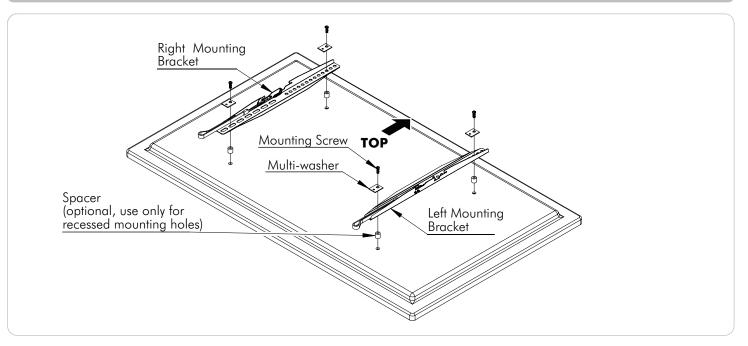


Step 4. Attaching/Detaching Display to Wall Plate

(2 people required)


Lift your Display, hooking the Mounting Brackets over the top of the Wall Plate Rail. Pull down on the two Straps, and gently push the bottom of the Display towards the Wall. Release the Straps to engage the locking mechanism, safely securing the Brackets to the Wall Plate.

Note: Make sure the TV is correctly hooked before releasing the Display.

Detaching Display from Wall Plate: Pull down on both Straps to disengage the locking mechanism. At the same time lift the Display away from the Wall Plate.

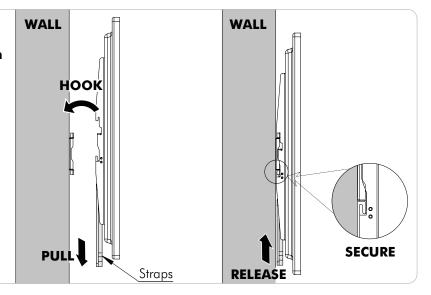

Step 5. Hide Straps

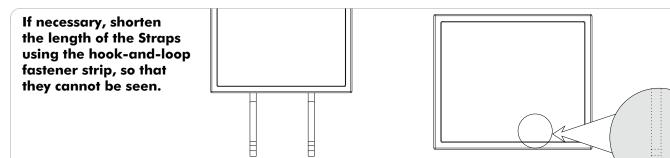

Installation Complete

