


Pop-Up Cinema Series


Indoor/Outdoor Portable Pop-up Projection Screen User's Guide

Thank you for choosing the *Pop-Up Cinema* portable projection screen! Please read through this user guide before utilizing the screen. Correct usage and maintenance will ensure a long product life.


Parts List

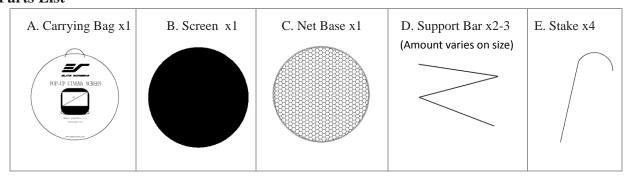


Note: The parts list above is subject to change without notice.

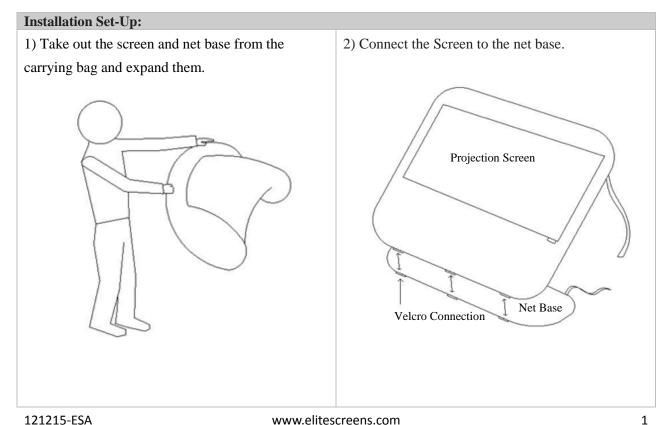

3) Insert the support bars across the backside of the screen (amount will vary depending on screen size) and then connect the rod sections so that it is at maximum length.

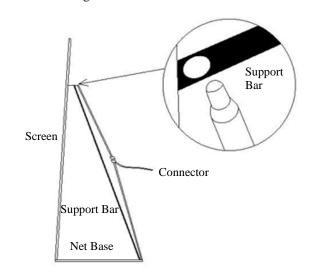


4) Ground the net base with the stakes.

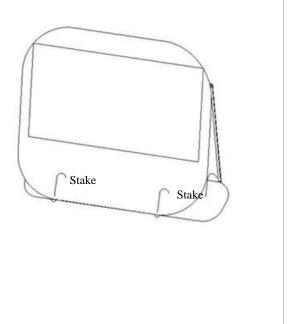


Disassembling the screen


1) Step on the back end of the screen and bring middle part of screen or net base towards you approximately 12" from your foot and hold that down stepping on it with your other foot.

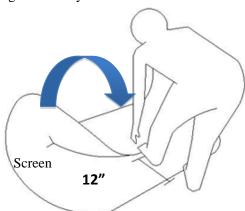

3) Bring the right side in toward your left foot and bring the left side towards your right foot.

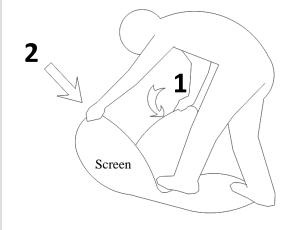


2) While holding the material down with both feet, lean forward and grab the left and right side.

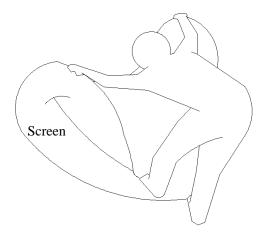


4) With your feet in position, bring both left and right sides in towards the ground.



5) Continue to bring the material down and remove your left foot. Push the screen down and continue to hold it in the compressed position. You should now be able to insert it into the bag.

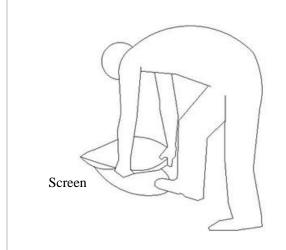

6) Repeat the above process with the net base to ensure it will also fit in the carrying bag.

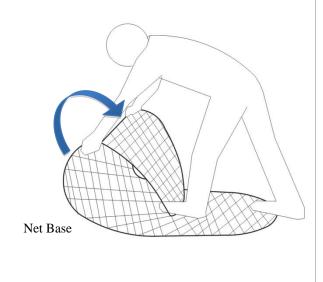

If a visual demonstration is needed, please view our disassembly video at:

www.elitescreens.com/video/popc-disassemble