
TH-1040-CTS TH-1040-CTSW TH-1040-CTL TH-1040-CTLW

Installation Instructions 4 telehook


Ceiling Tilt Short Mount / Ceiling Tilt Long Mount


Component Checklist

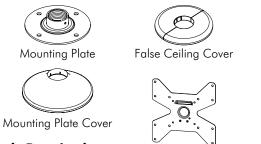



Tools Required:

- Power drill
- 7mm (1/4") drill bit
- 12mm (½") masonry drill bit
- Phillips head screw driver
- 17mm (11/16") Socket Wrench or Shifter





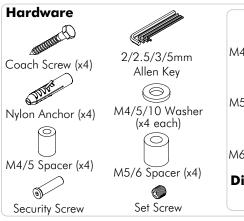

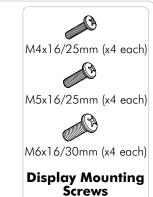

IMPORTANT INFORMATION:

- ! IMPORTANT Install Telehook 1040 Ceiling Tilt Mount (Short/Long) as per Installation Instructions.
- ! This product supports a maximum load of 25kg (55lbs).


VESA Plate

- ! This product supports VESA mounting hole configurations 75x75mm, 100x100mm, 200x100mm, 200x200mm.
- ! The manufacturer accepts no responsibility for incorrect installation.


Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.


Step 2. Install Mounting Plate

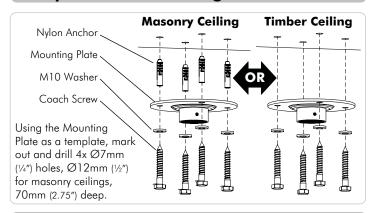


Step 3. Install Mounting Plate Cover

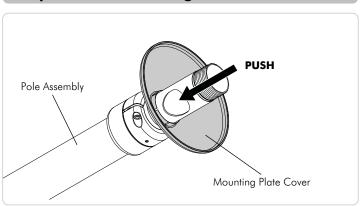


Step 4. Attach Pole Assembly to Mounting Plate

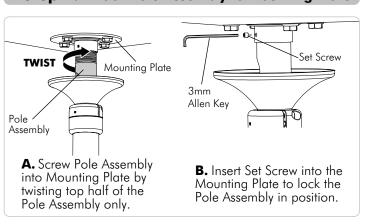


Step 5. Position Mounting Plate Cover

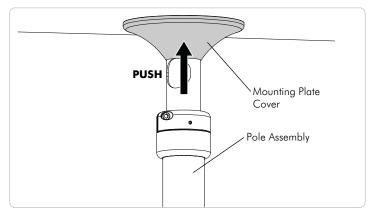


Step 6. Set Height of Pole

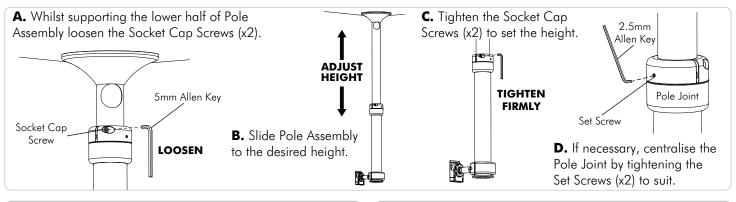


Step 7. Attach VESA Plate to Display

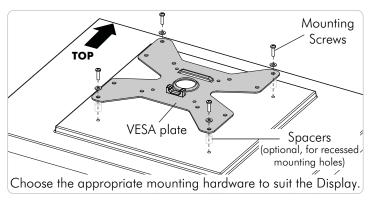


Step 8. Attach Display to Pole Assembly

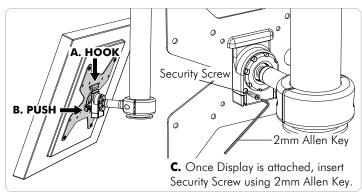


Step 9. Cable Management

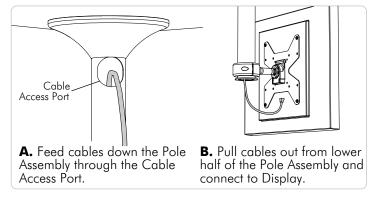


Step 10. Height Adjustment

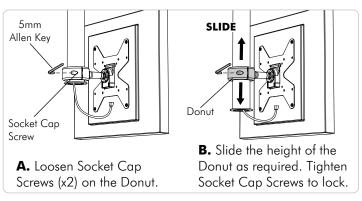

Step 11. Final Adjustment

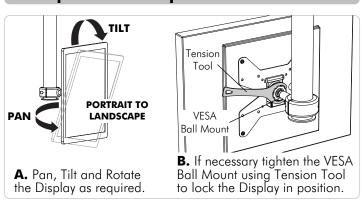

Step 12. Install False Ceiling Cover

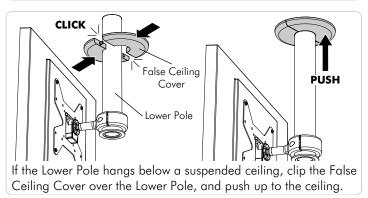

Installation Complete



No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published 03.08.11 ©