
Installation Instructions Otelehook FLAT SCREEN WALL MOUNT | FIXED

TH-3070-UF

Important Notes

- Supports a maximum load of 91kgs (200lbs).
- Suits displays with mounting hole patterns from 180mm to 810mm wide (7"-31³/₄") by 125mm to 500mm high (5"-19¹/₂").
- The manufacturer does not accept responsibility for incorrect installation.





TOOLS REQUIRED:

- Power Drill
- 12mm ($\frac{1}{2}$ "), 10mm ($\frac{3}{8}$ ") or 7mm ($\frac{1}{4}$ ") Drill Bit
- Phillips Head Screw Driver
- Spirit Level

Masonry Wall

Wall Plate

Coach Screw

• 17mm (11/16") Socket Wrench or Shifter

Bits Bag









Washer (x4)

Recessed Hole Bush (x4)

Spacer Bush (x4)

Mounting Screws



M8x15mm / M8x35mm / M8x45mm (x4 each)

M6x15mm / M6x35mm / M6x45mm (x4 each)

M5x15mm / M5x35mm / M5x45mm (x4 each)

Cross Recessed Screws

ws M4x15mm / M4x35mm / M4x45mm (x4 each)

(A) Mounting the Wall Plate


Note: Ensure the Wall Plate is mounted with the folded tabs pointing upwards. 12mm (1/2") Hole OR

TIP: Use a spirit level to ensure the wall plate is horizontal

It is recommended when mounting directly into masonry wall, that the mounting holes are positioned as far apart as possible.

Dry Wall

Note: Ensure the Wall Plate is mounted with the folded tabs pointing upwards.

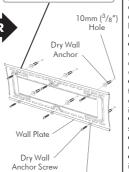

TIP: Use a spirit level to

ensure the wall plate is

horizontal

Drv Wall

Anchor Washer

the bit bag have been tested for this wall mount application and will each hold in excess of 30kg per anchor. Before using the expanding anchors, please ensure that you:

The dry wall anchors provided in

 Check the plaster board wall (dry wall) is in good condition with no cracks, peeling paper or signs of water damage etc.

- Take care installing the anchors, that they are not over tightened or driven into the wall during installation.
- Minimum thickness of drywall
- should be no less than 12mm (1/2")
 Recommend to use all 6 anchors
- even with light monitor applications.

 Only use the anchors supplied in the kit.
- Make sure the 10mm (3/8") predrilled hole is as recommended and no smaller or larger.
- The anchors during expansion should not interfere with studs or noggins (cross strengtheners).


Timber Stud Wall

Note: Ensure the Wall Plate is mounted with the folded tabs pointing upwards.




TIP: Use a spirit level to ensure the wall plate is horizontal

Use a stud finder to precisely locate the timber stud and ensure that the mounting holes are located in the centre of the stud.

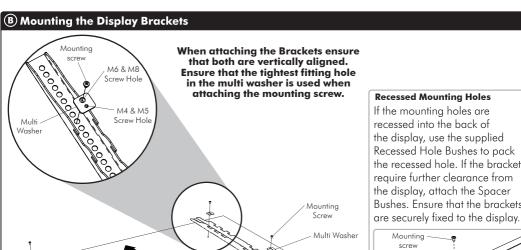

Recessed Mounting Holes If the mounting holes are recessed into the back of the display, use the supplied Recessed Hole Bushes to pack the recessed hole. If the brackets require further clearance from the display, attach the Spacer Bushes. Ensure that the brackets

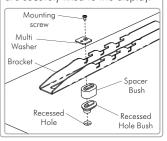


© Attaching the display to the wall plate

Top of

Display

Note: This procedure will require two persons

With the Brackets attached to the display, lift the display and hook the brackets onto the Wall Plate as shown. There are three height positions to choose from in 50mm (2") increments.

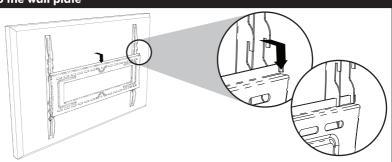

Back

of Display

